




## Installation:

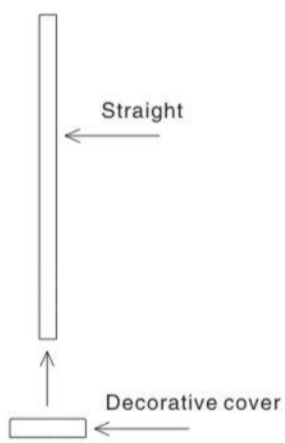


1、 Put the base cover over the pipe.

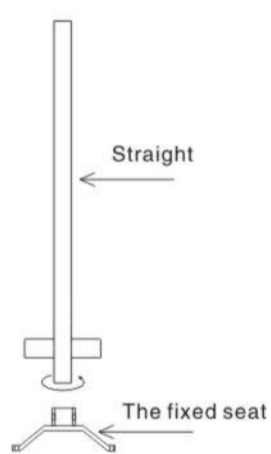


2、 Screw the pipe to the base.

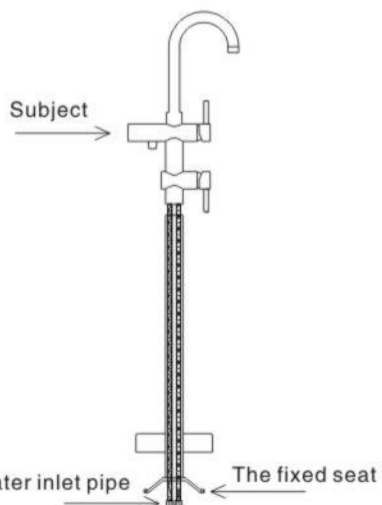

3、 .Install the flexible hose now and ensure the flexible hoses are hand tightened into place (DO NOT USE SPANNER TO TIGHTEN AS IT CAN DAMAGE THE O-RING). The flexible hoses are to be fitted into the correct inlets for hot water and for cold water.

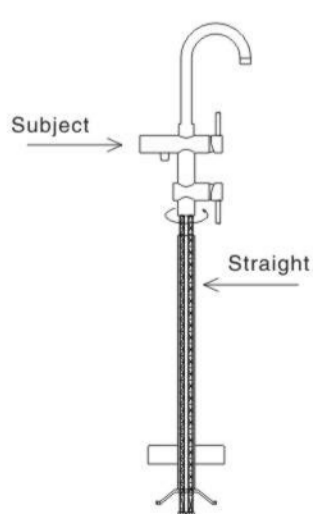


4、 Fix the faucet body to the pipe.

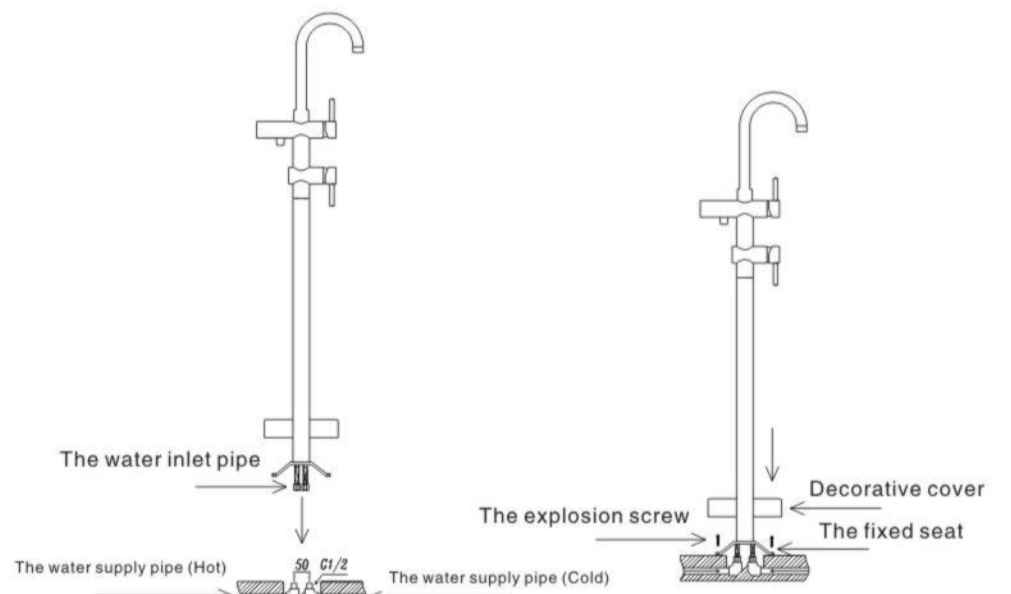

5、 Connect another side of the flexible hose to the water supply pipe. Make sure they are to be fitted into the correct outlets for hot water and cold water.

6、 Use the explosion screw to fix the base on the ground, and put the base cover over the base.

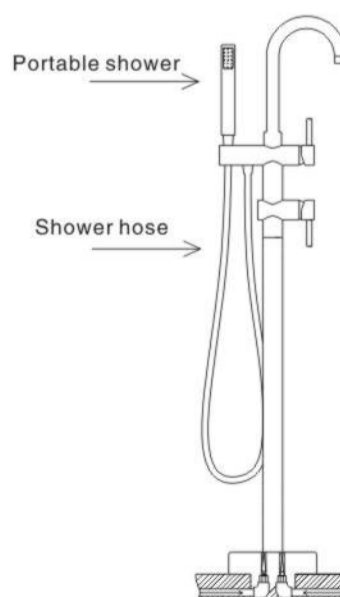

7、 Connect the shower hose and hand shower.

## Description:

- 1.Handle: Lift it up for turning water on. Turn it right for cold water while turn it left for hot water.
- 2.Divertor: switch water between spout & hand shower. Turn left for hand shower, while turn right for spout.

## Caution:

Before installation all water lines must be flushed to remove any foreign material so that it does not interfere with the flow regulated aerator or damage the cartridge. .